



Operating a BMW compatible Digital Media Player

1. Setting the audio mode.

Put the head unit into CD changer mode by pressing the CD button

2. Using the SSA/Voice Interface for stereos with 6 DISC buttons.


The PhatBox uses the 6 DISC buttons as "mode" buttons.

- Button 1 activates track browsing
- Buttons 2 through 5 are Browse Modes
- Button 6 lists features



B. Use the TRACK FORWARD or TRACK BACKWARD buttons to find the next **Selection** in a **Mode**.

C. Push the Track button (the DISC 1 button) and then use the TRACK FORWARD or TRACK BACKWARD buttons to advance through the **Tracks** within your **Selection**.

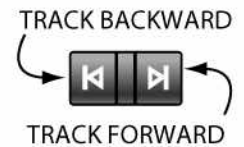

D. After 5 seconds of song play the PhatBox will automatically toggle into track browsing mode. You can then use the SEEK toggle button to advance through the **Tracks** within your **Selection**.