



## Operating a Honda/Acura compatible Digital Media Player


### ① Setting the stereo to CD Changer Mode for stereos with Disc Up / Disc Down

Put the stereo in the changer mode by pressing the CD Changer button.

### ② Using the SSA/Voice Interface

The PhatBox uses the SCAN button to toggle through 4 modes

The modes are in the following order:

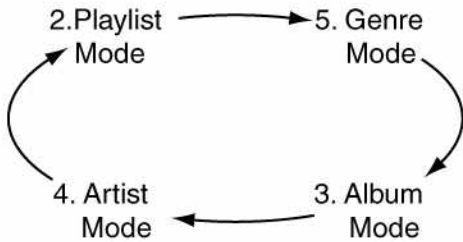

Note: The CD Manager (not the Music Manager) creates one "playlist" for every CD copied onto the DMS cartridge. The "Discs" shown in the CD Manager software are referred to as "playlists" in the car.



- Toggle Random On/ Off (Press once)
- Toggle between Magazine and Disc Random (Double-press quickly)

### ③ Navigating Mode Items

After the car stereo is set to one of the 4 modes navigate through the list of items (playlists, artists, albums, or genres) by using the *next/previous* disc/item buttons.

- Previous Disc/Item
- Next Disc/Item

### ④ Navigating Songs

After finding a playlist, artist, album, or genre navigate through the songs by using the *next/previous* track buttons.

- Previous Track (Press once)
- Backward Seek (Hold)
- Next Track (Press once)
- Forward Seek (Hold)

Honda Pilot stereo pictured may not be identical to your stereo and is shown only as an example